ATS CHANGEOVER SWITCH AUTOMATIC MODE

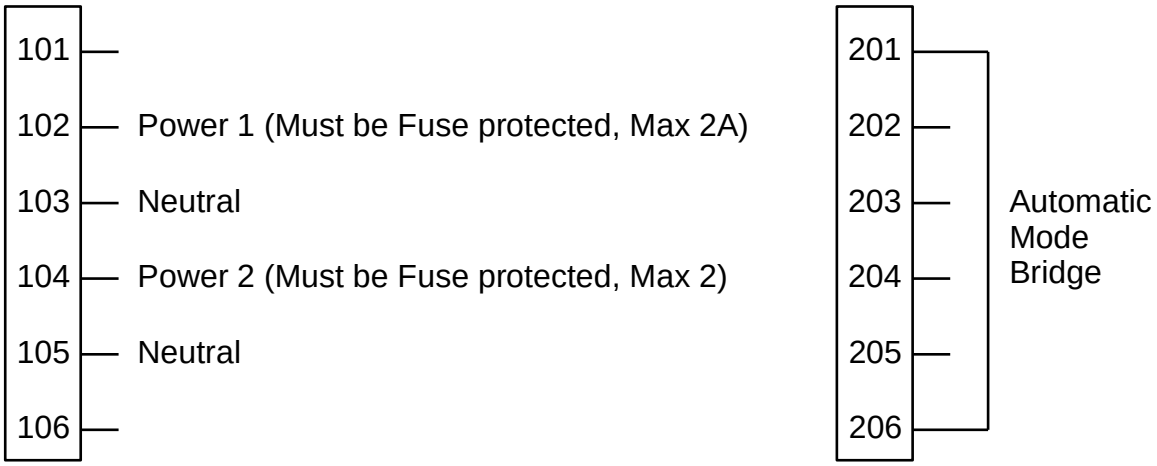

In automatic mode switch position 1 or 2 is selected by wheather power is applied to connections 102 (Moves switch to position 1) or 104 (Moves switch to position 2). Connections 103 and 105 must be connected to neutral.
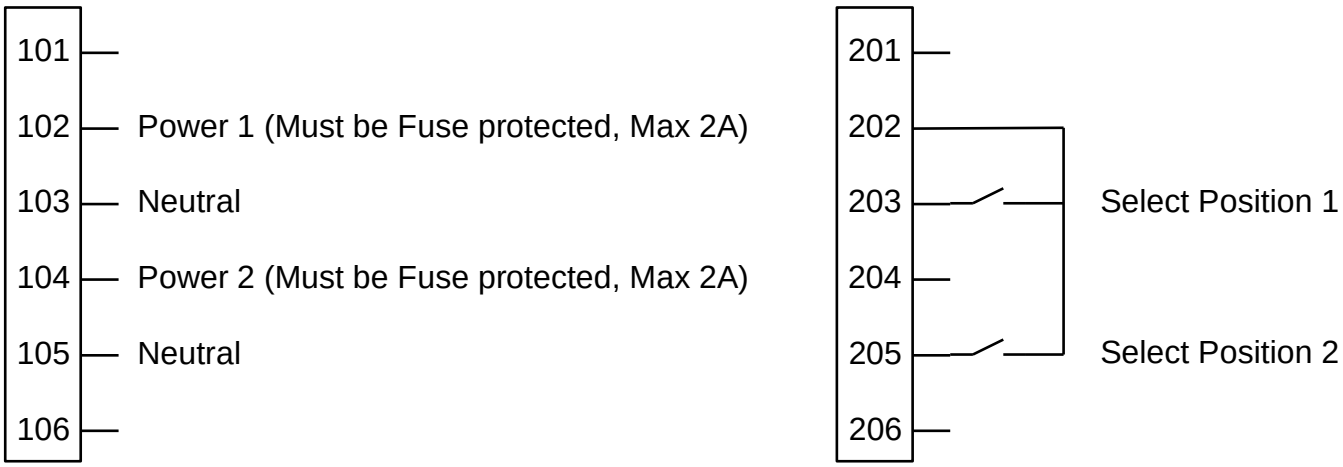
ATS CHANGEOVER SWITCH MANUAL MODE